

Special Rail Mounting Caps

For SGL and SGW guides, special rail mounting caps are available to prevent dust from entering the mounting holes.

These caps are installed, after the rail is fixed to the base, by using a jig and slowly inserting them into the holes until their top surface is flush with the rail surface.

Figure A-29 Special Cap

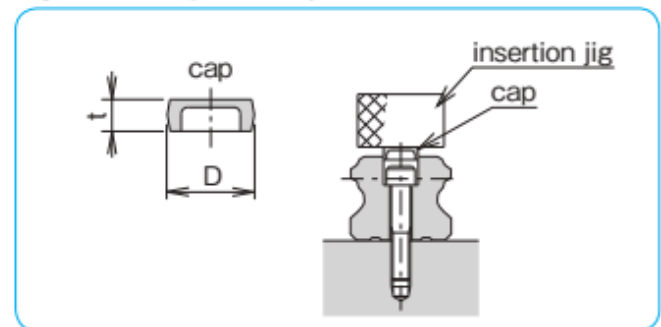


Table A-6 Special Cap

part number	dimensions		t mm	applicable part number		
	size	D mm		SGL-F,TF SGL-E,TE	SGL-HTF,HYF SGL-HTE,HYE SGL-HTEX	SGW
F 3	M 3	6	1.3	15	—	—
F 4	M 4	7.5	1.25	15D	15	17 21 27
F 5	M 5	9.5	3	20	20	—
F 6	M 6	11	3	25 30	25	35
F 8	M 8	14	4	30D 35	30 35	—
F12	M12	20	4.65	—	45	—