
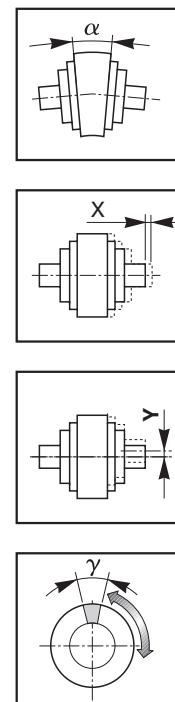


<b>SERIE / MODEL</b>	LPG □□□
<b>CODICE / CODE</b>	03.07.□□□.01

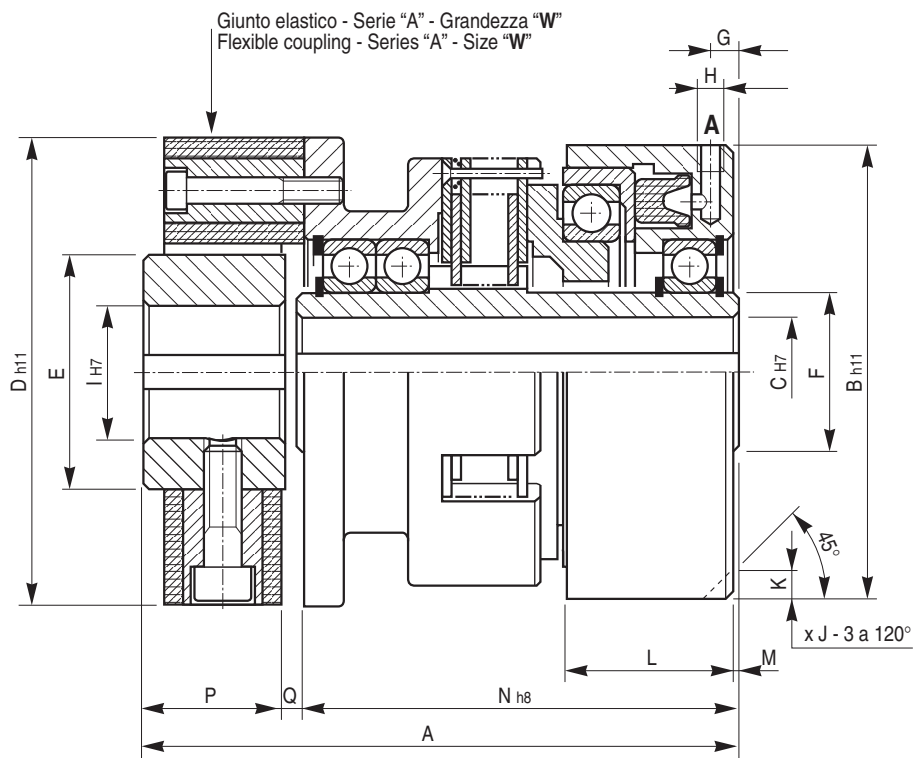

**A** = Alimentazione aria / Air supply

□□□	Momenti Torques Mi (Nm)	Momenti Torques Ms (Nm)	Pressione lavoro Working pressure (bar)	Volume cilindro Cylinder volume (cm <sup>3</sup> )	Giri/1' R.P.M. limit max	Peso Weight (kg)	Dischi interni Internal plates N.	Giunto Elastico Flexible Coupling Size W
002	44	65	6	4	3000	4,1	4	4
003	75	114	6	6	2800	6,7	4	8
004	140	210	6	10	2400	9,0	5	16
006	330	460	6	16	2000	15,3	5	28
008	590	830	6	30	1800	24	6	50
010	1200	1700	6	50	1400	46	6	140

□□□	A	B	C		D	E	F	G	H	I		JxK	L	M	N	P	Q	X	Y	α	γ
			min.	max						min	max										
002	134	97	12	22	100	45	30	7	1/8"	12	30	10x9	38	1	100	30	4	2	1	1°	6°
003	156	115	16	26	120	60	35	7	1/8"	12	38	10x10	46	1	110	42	4	2	1	1°	7°
004	174	127	18	34	150	70	45	7	1/8"	15	48	10x10	44	1	118	50	6	2	1	1°	7°
006	191	153	20	46	170	85	60	9,5	1/4"	15	55	12x12	49	1,5	130	55	6	3	1	1°	4°
008	224	167	25	50	200	100	65	9	1/4"	20	65	12x12	55	1	150	66	8	3	1	1°	4°
010	263	216	30	68	260	125	85	9	1/4"	30	85	14x14	65	1	175	80	8	3	1	1°	4°